


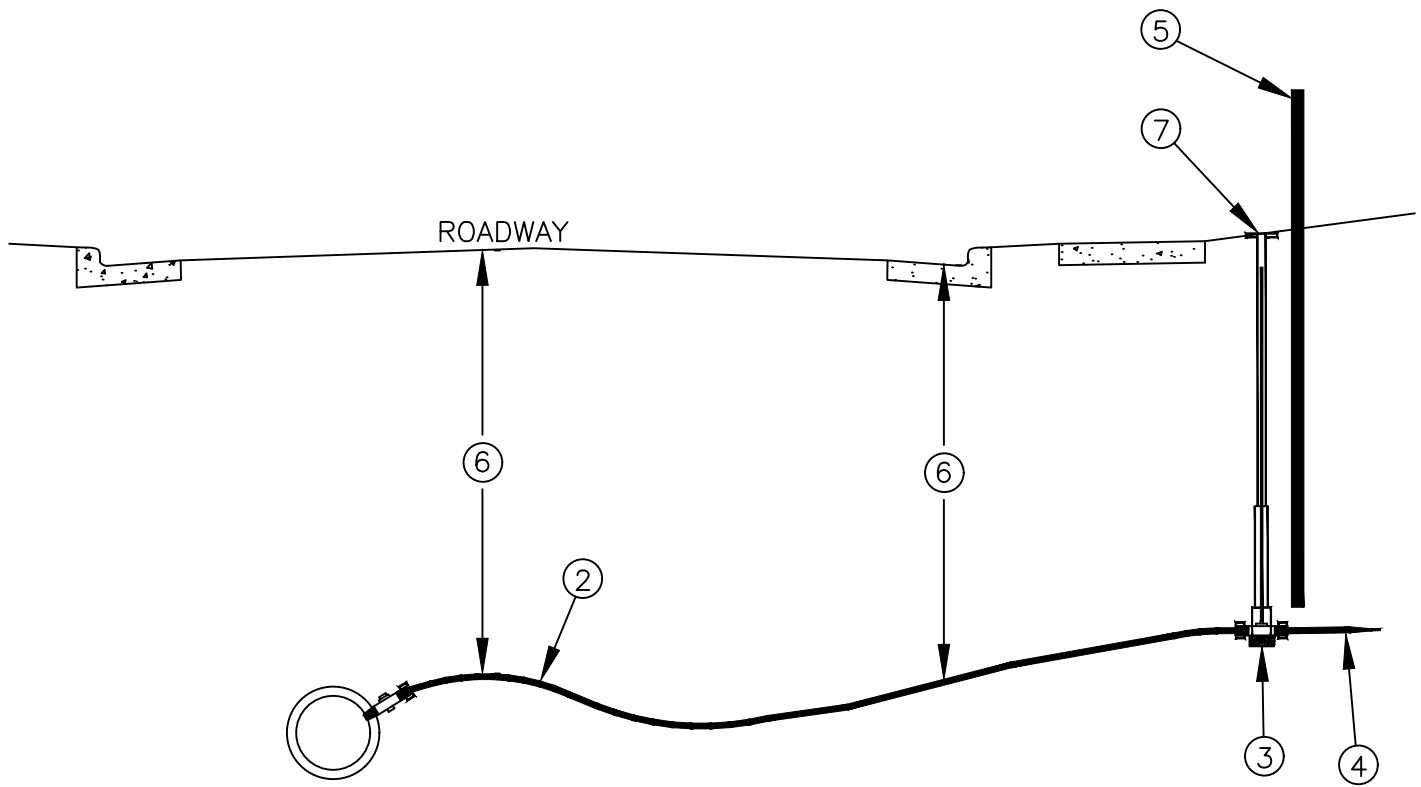

NOTES:

- 1 PROVIDE 1' MINIMUM SELECT GRANULAR BACKFILL AROUND WATER SERVICE PIPE, CORPORATION/MAIN, AND CURB STOP.
- ② CONSTRUCT "GOOSENECK" ADJACENT TO CORPORATION TAP.
- ③ SUPPORT CURB STOP BOX WITH SOLID CONCRETE BRICK.
- ④ CONNECT TO EXISTING WATER SERVICE OR CAP FOR FUTURE CONNECTION.
- ⑤ PROVIDE 2"X2" WOOD MARKER POST FOR FUTURE CONNECTION LOCATING.
- ⑥ MAINTAIN 7.5' MINIMUM COVER THROUGH ROADWAY.
- ⑦ ADJUST CURB STOP BOX TO FINISHED GRADE.

DATE REVISED
03/27/17

WATER SERVICE

PLATE NO.
2-01